DuPont™ ArmorWall™ System

Assembly Details - Wood Stud

Table Of Contents

Title and Table of Contents	1
Full Brick and Mortar Veneer	2
MCM Over Horizontal Hat Channels	3
Lap Siding Over Wood Furring	4
Adhered Stone	5
Adhered Stone Tile	6
Panel Cladding	7
Phenolic Panel Cladding	8
Adhered CF Panel Cladding	9
EF Panel Cladding	10
Adhered Neolith Sintered Stone Panel	11
Rail & Clip Panel Cladding	12
Ceramic Panel Cladding	13
Hard Coat Stucco	14
Notes	15

DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with™, SM or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted. © 2024 DuPont.

Table of Contents

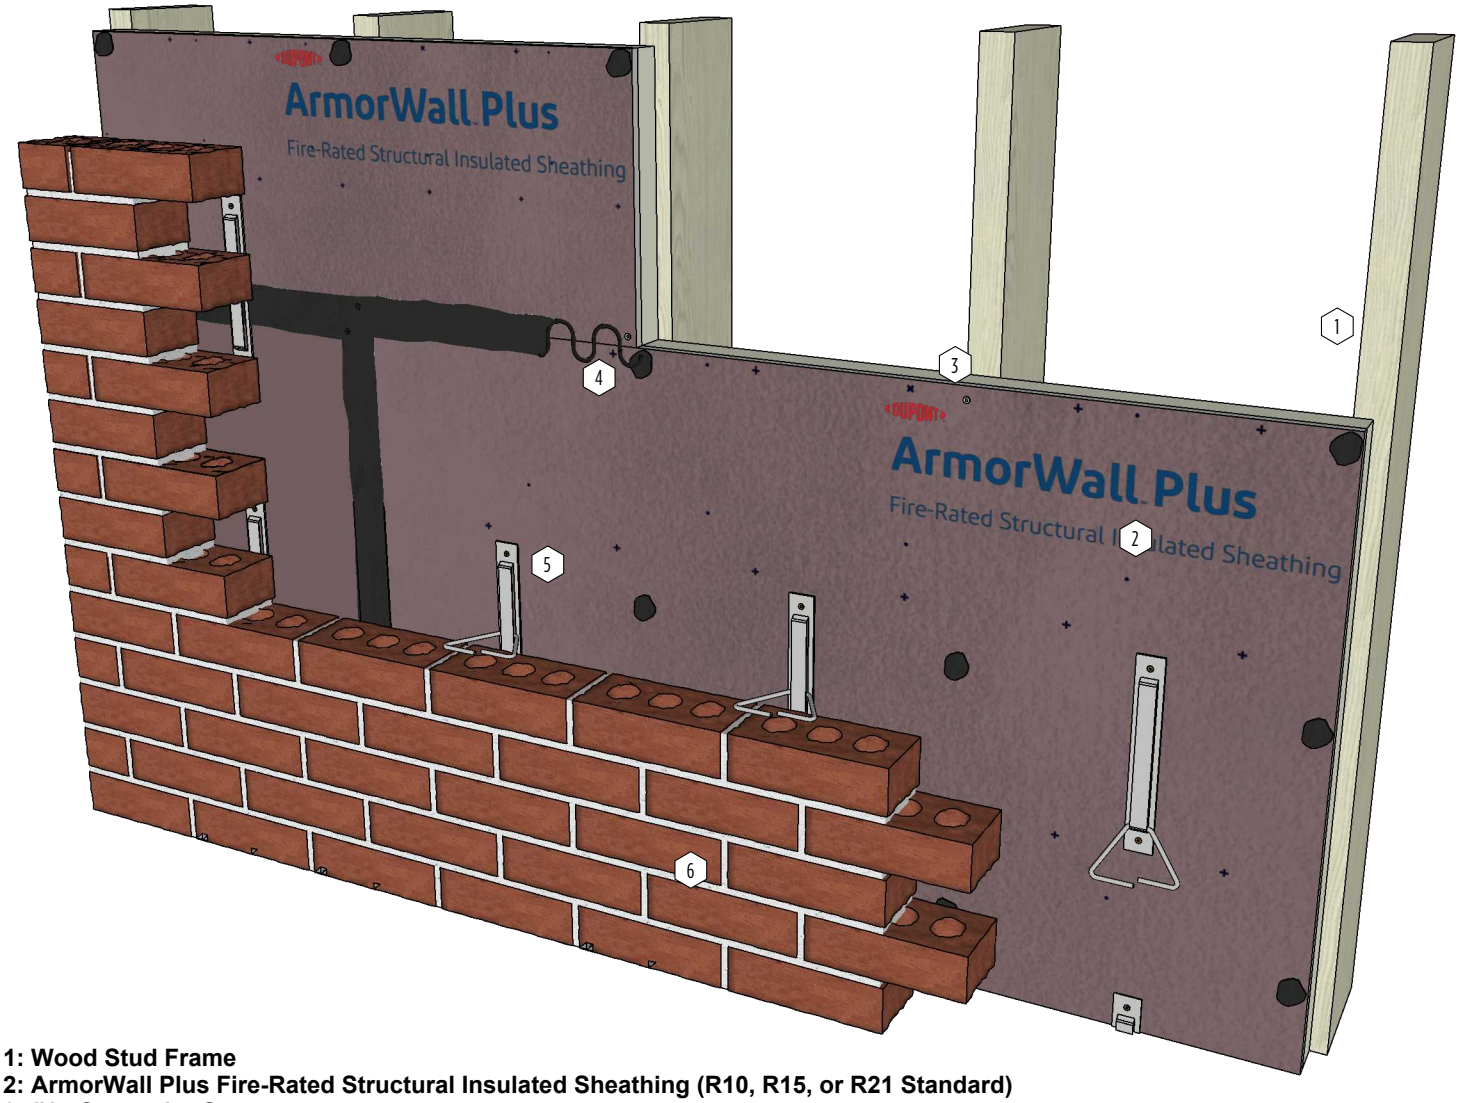

1: Wood Stud Frame
2: ArmorWall Plus Fire-Rated Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14 Consealor Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: Hohmann & Barnard DW-10 Brick Tie Attached with #10-9 Gimlet Point Self Tapping Screw
6: Full Brick and Mortar Veneer

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
FULL BRICK AND MORTAR VENEER ON ARMORWALL PLUS TO WOOD STUD FRAME FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with ™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

Table of Contents

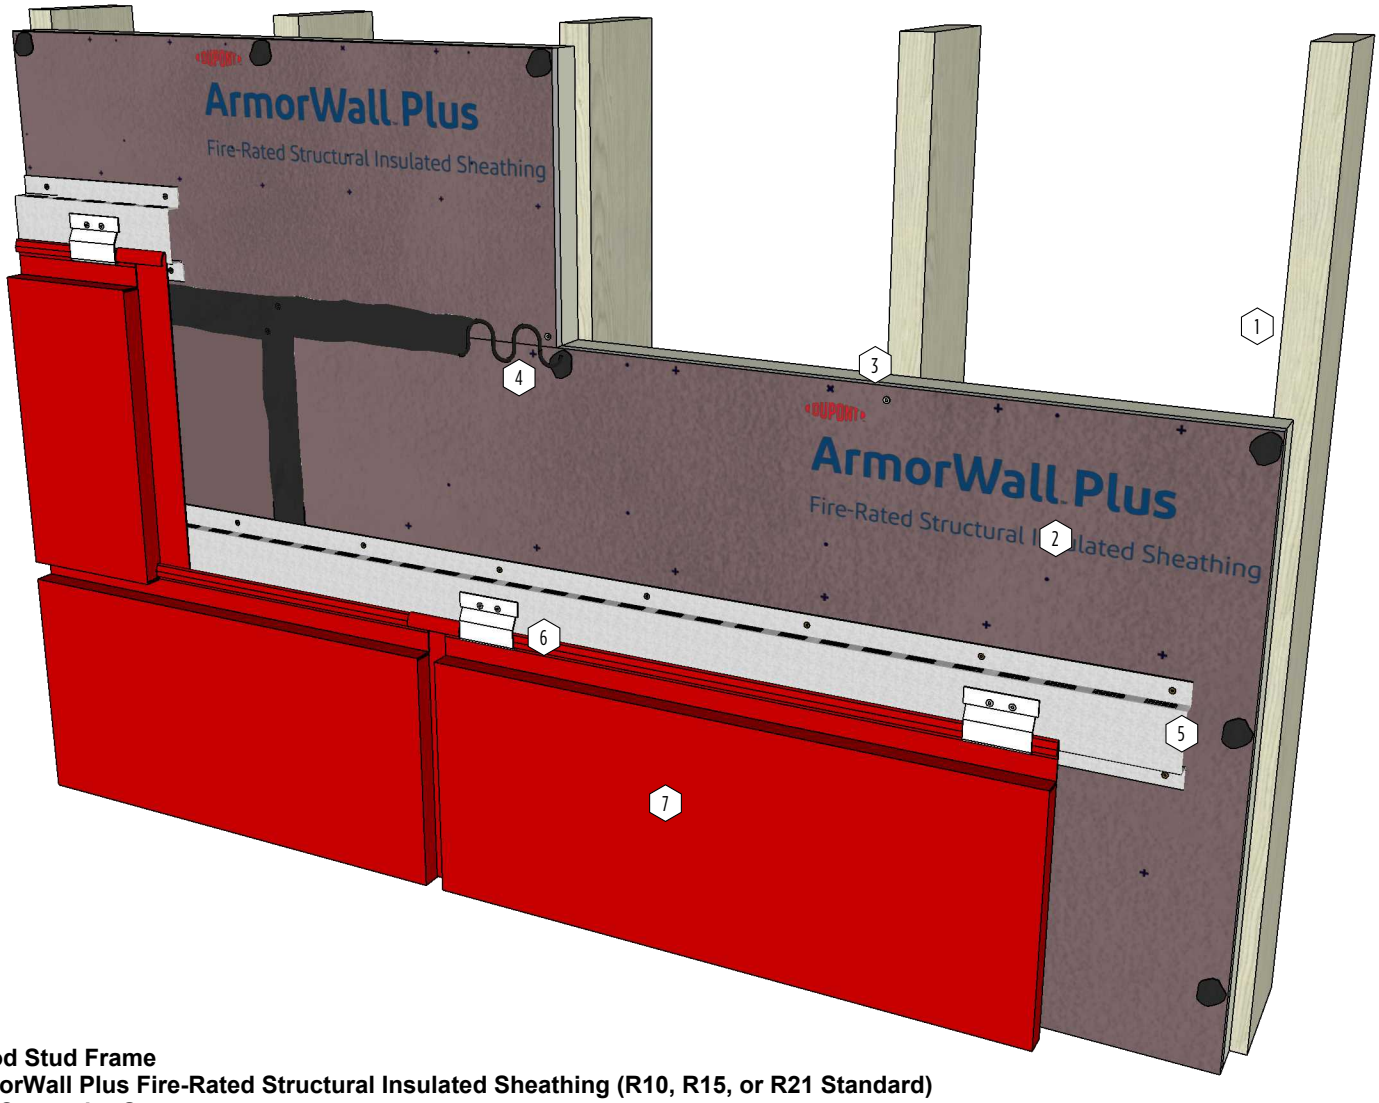

1: Wood Stud Frame
2: ArmorWall Plus Fire-Rated Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14 Consealor Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: Vented Hat Channel Fastened with #10-19 Gimlet Point Self Tapping Screw
6: Cladding System Clip Attached with Approved Fasteners
7. Metal Wall Panel

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
ADHERED STONE TILE ON ARMORWALL PLUS TO WOOD STUD FRAME FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

Table of Contents

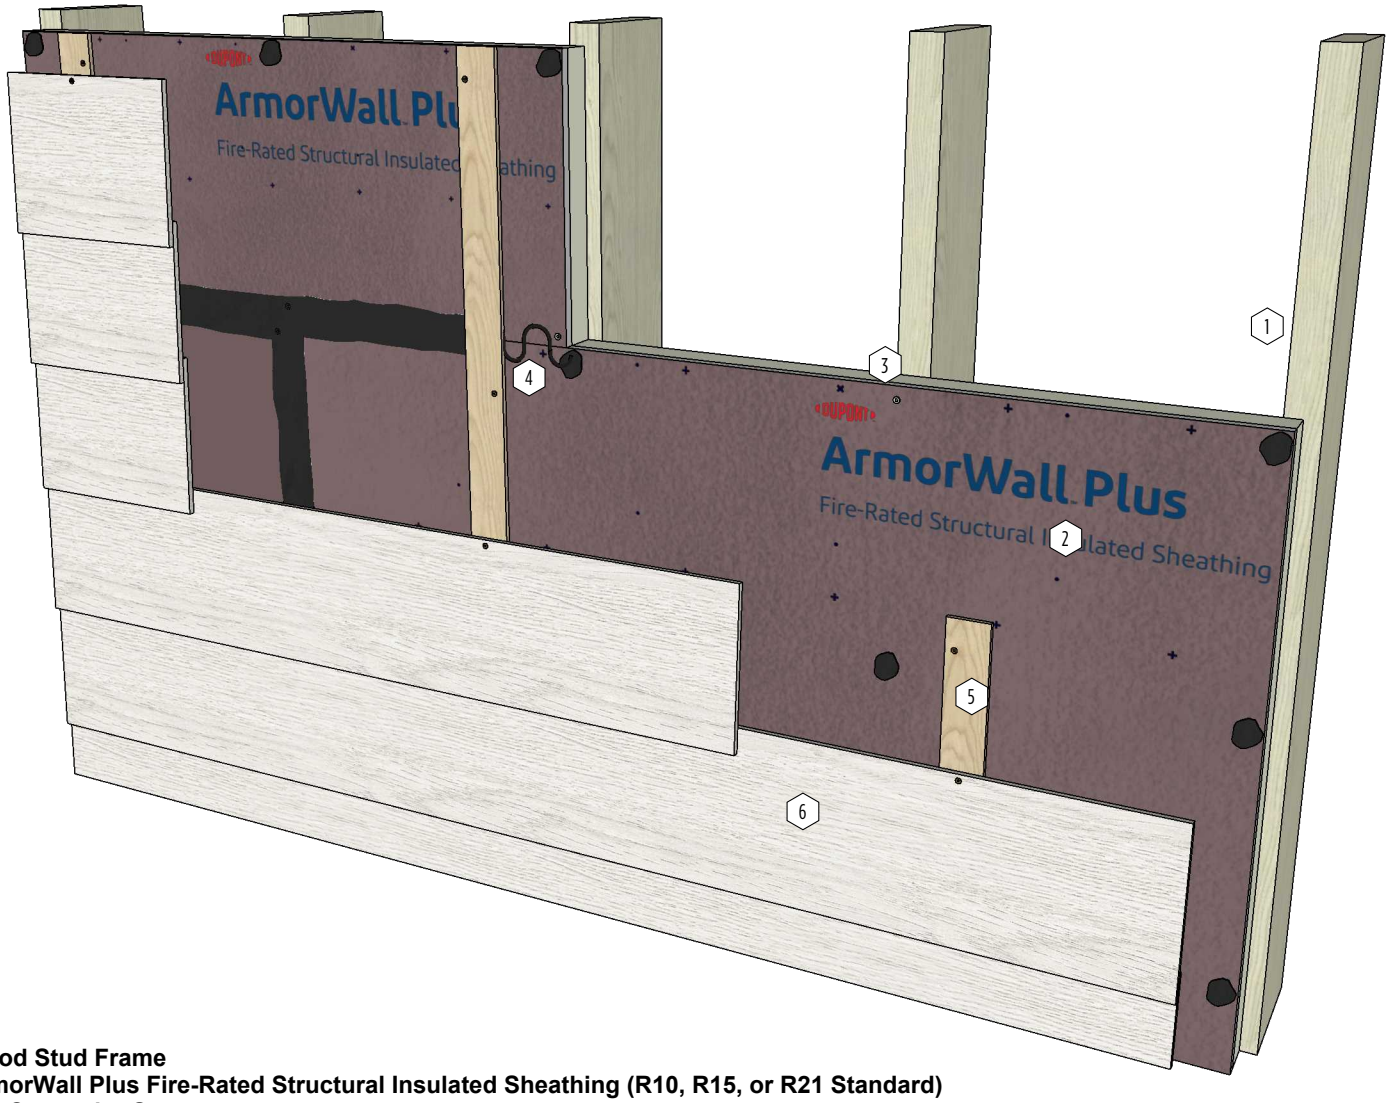

1: Wood Stud Frame
2: ArmorWall Plus Fire-Rated Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14 Consealor Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: Furring Strips Attached with #10-9 Gimlet Point Self Tapping Screw
6: Fiber Cement Lap Siding

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
LAP SIDING OVER WOOD FURRING ON ARMORWALL PLUS TO WOOD FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with ™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

Table of Contents

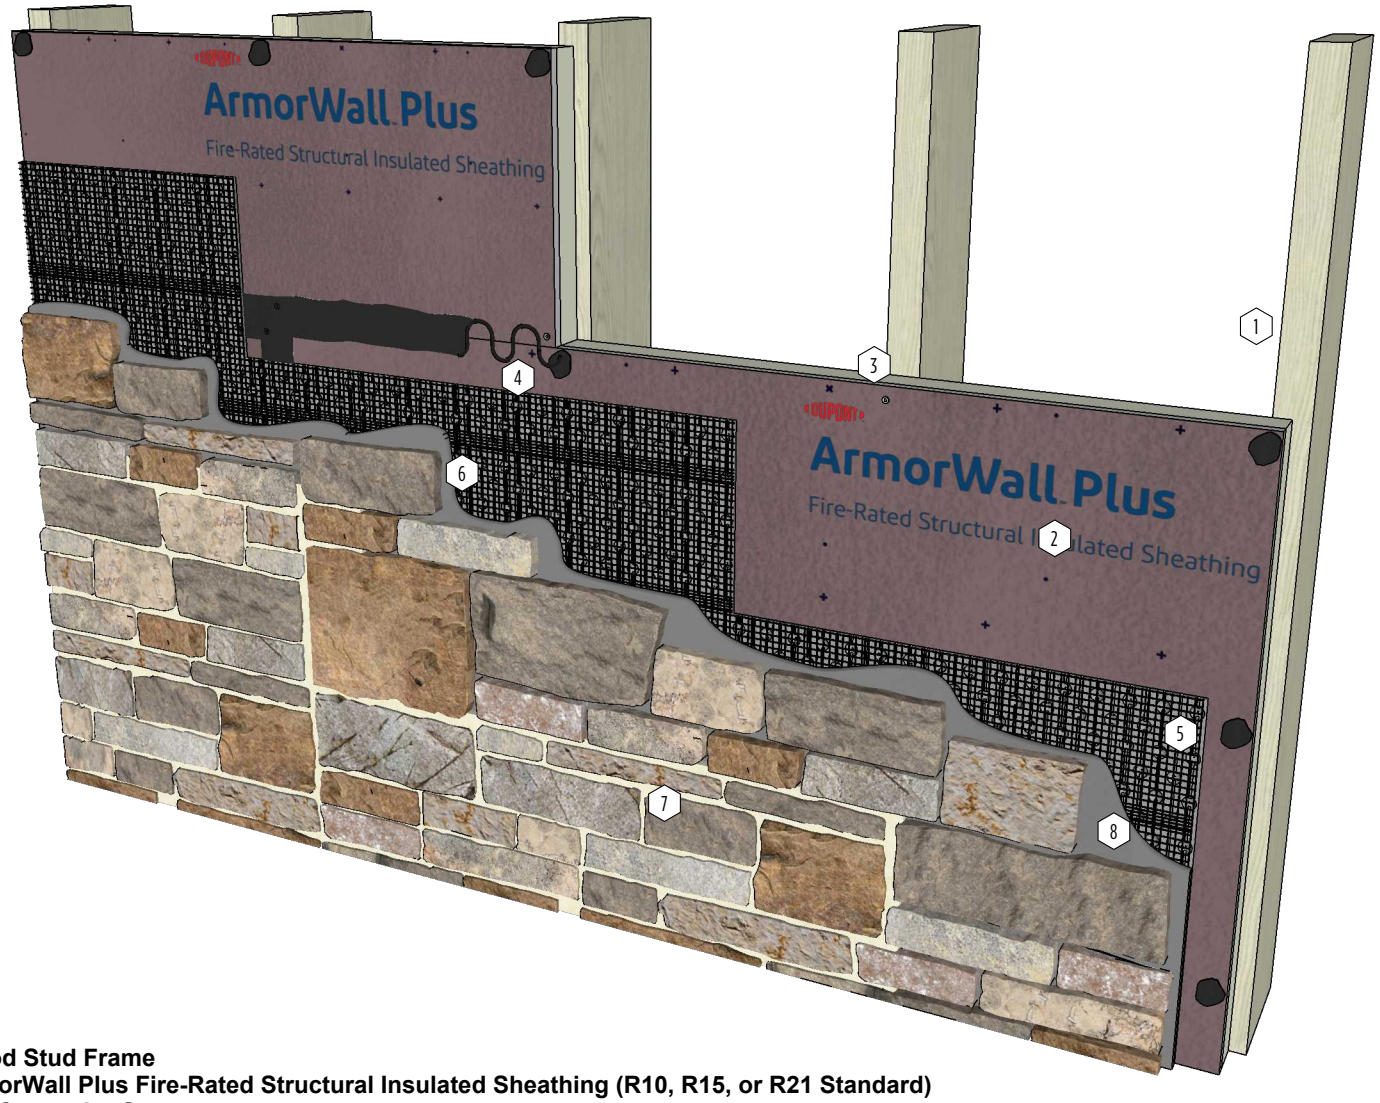

1: Wood Stud Frame
2: ArmorWall Plus Fire-Rated Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14 Consealor Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: Delta Dry and Lath or Equivalent Non-permeable Drainage Mat Attached with #10-9 Gimlet Point Self Tapping Screw
6: Veneer Mortar
7: Adhered Stone
8: Standard Pointing Mortar

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
ADHERED STONE ON ARMORWALL PLUS TO WOOD STUD FRAME FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with ™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

Table of Contents

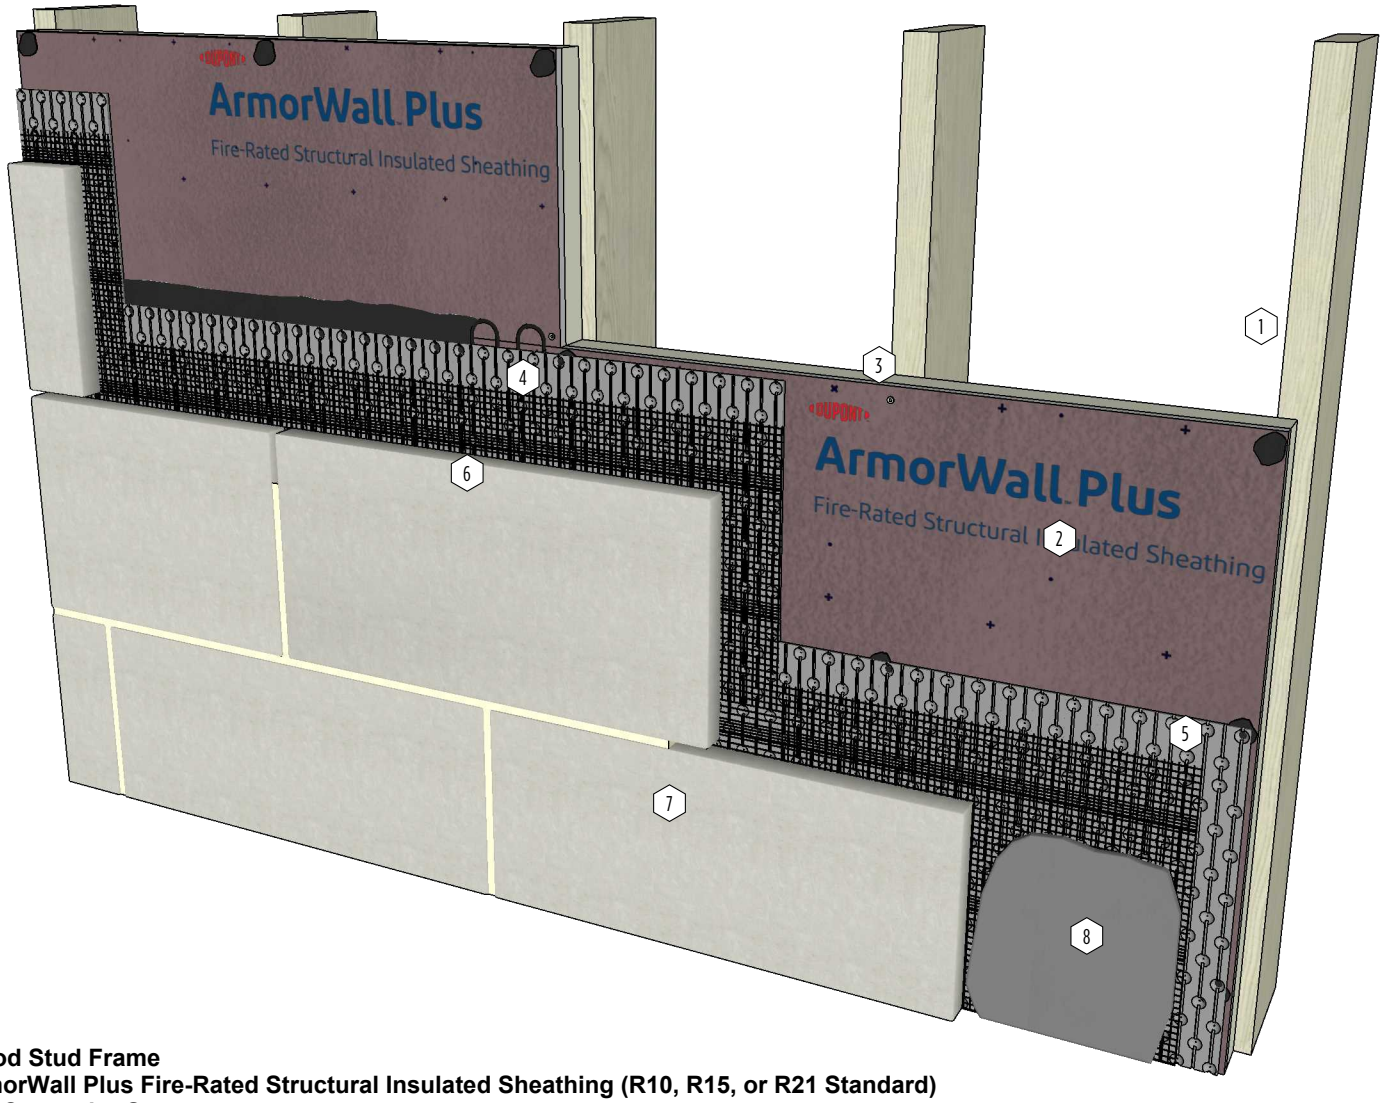

1: Wood Stud Frame
2: ArmorWall Plus Fire-Rated Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14 Consealor Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: Delta Dry and Lath or Equivalent Non-permeable Drainage Mat Attached with #10-9 Gimlet Point Self Tapping Screw
6: Veneer Mortar
7: Adhered Stone Tile
8: Standard Pointing Mortar

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
ADHERED STONE TILE ON ARMORWALL PLUS TO WOOD STUD FRAME FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with ™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

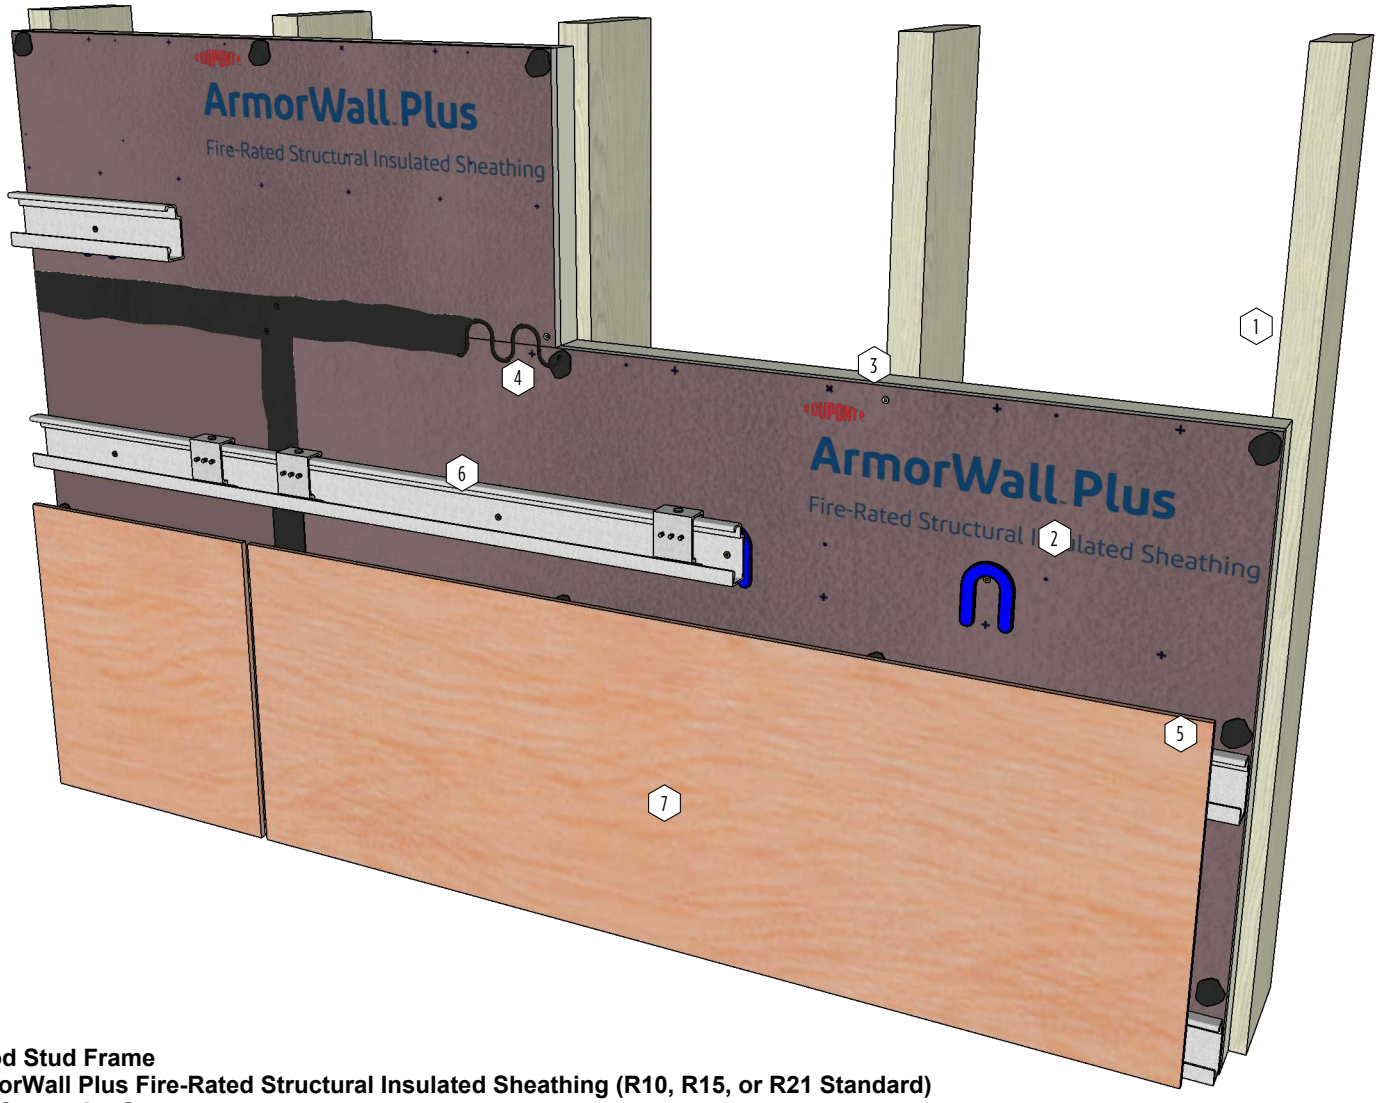

1: Wood Stud Frame
2: ArmorWall Plus Fire-Rated Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14 Consealor Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: Plastic Horseshoe Shim
6: Horizontal Rail and Clip Cladding Mount Attached w/ #10-9 Gimlet Point Self Tapping Screws
7: Cladding System Panels

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
PANEL CLADDING ON ARMORWALL PLUS TO WOOD STUD SUBSTRATE FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

Table of Contents

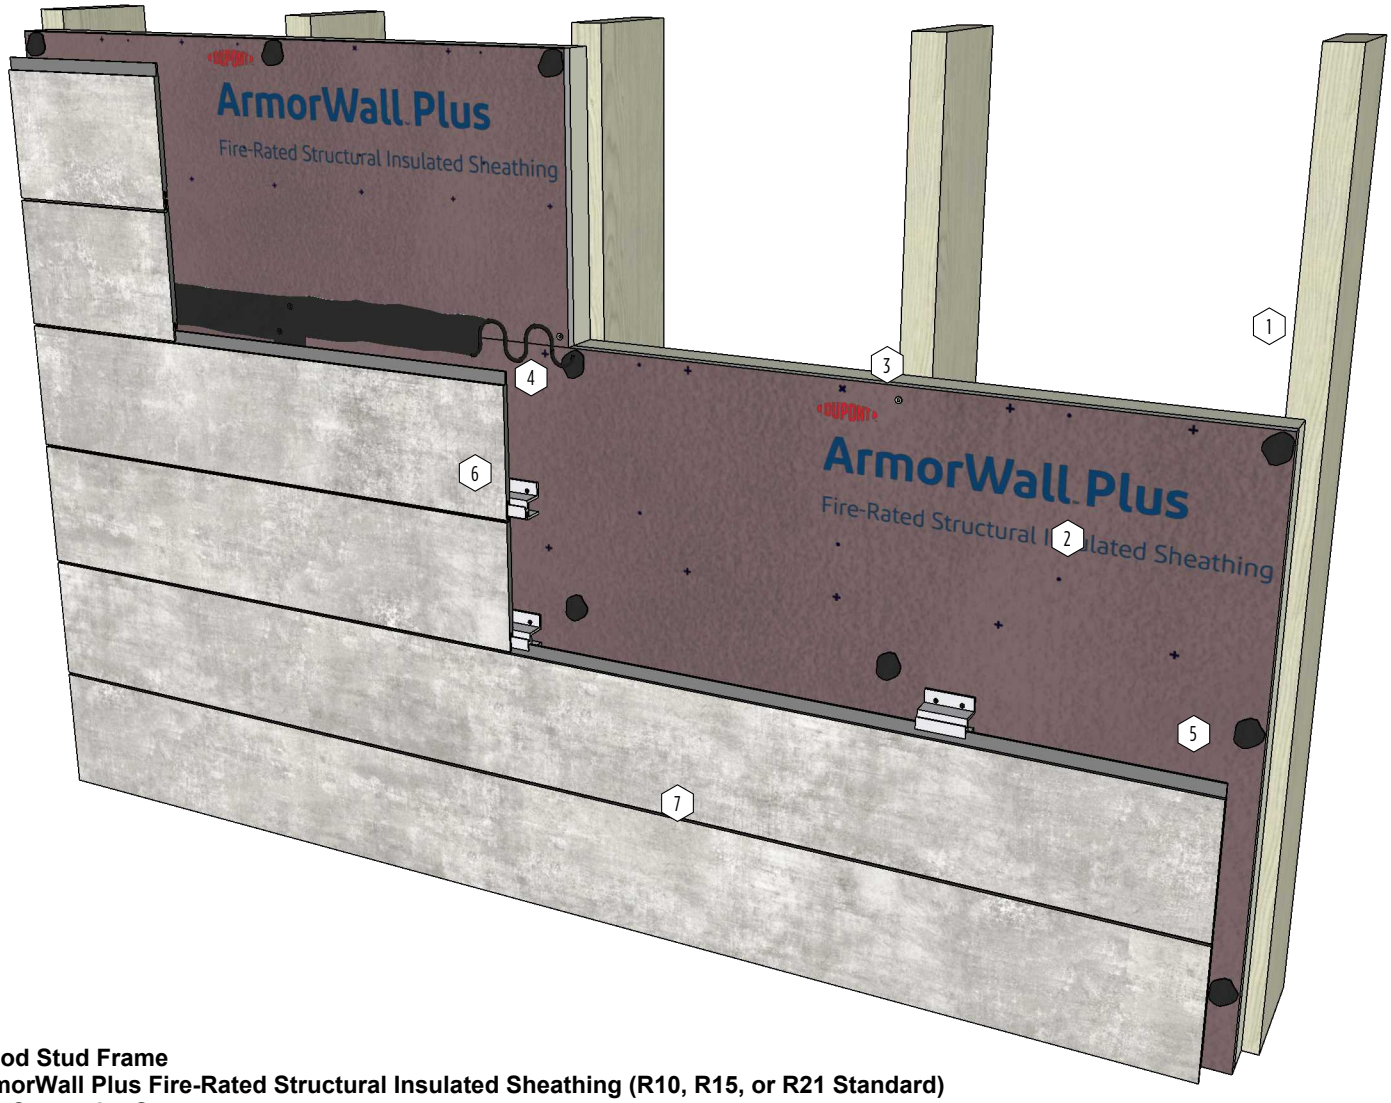

1: Wood Stud Frame
2: ArmorWall Plus Fire-Rated Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14 Consealor Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: Cladding System Clip Attached with #10-9 Gimlet Point Self Tapping Screw
6: Phenolic Cladding System Panels

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
PHENOLIC PANEL CLADDING ON ARMORWALL PLUS TO WOOD STUD FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

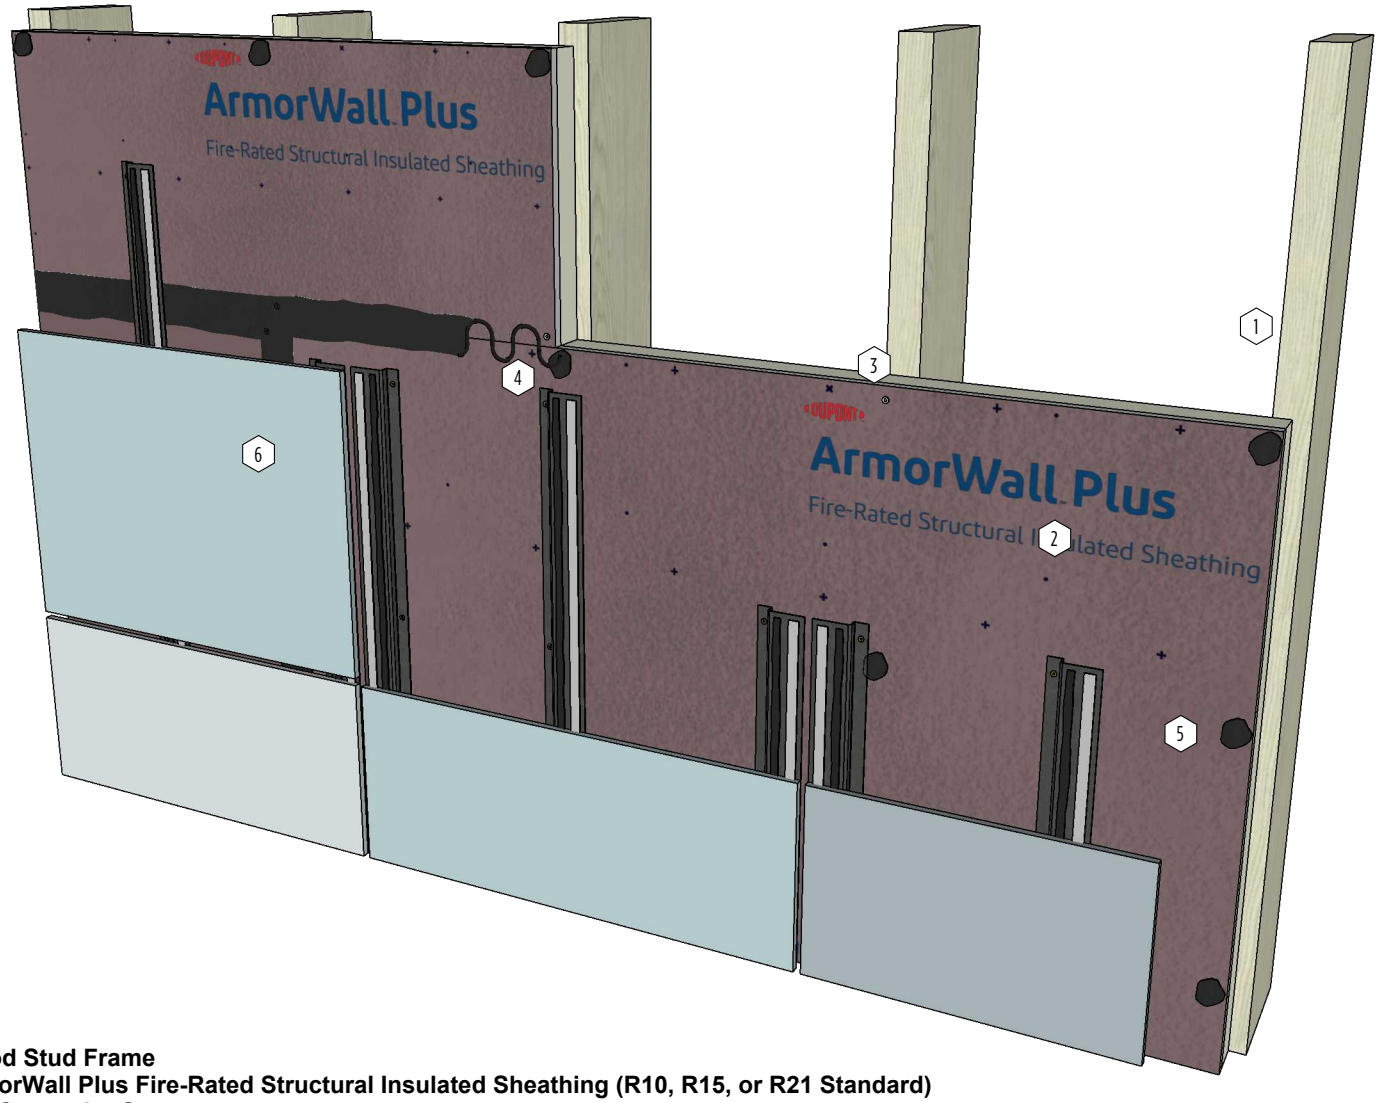

1: Wood Stud Frame
2: ArmorWall Plus Fire-Rated Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14 Consealor Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: Zee Cladding Mount Fastened with #10-9 Gimlet Point Self Tapping Screw
6: Adhered Concealed Fastener (CF) Cladding Panels

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
ADHERED CF PANEL CLADDING ON ARMORWALL PLUS TO WOOD STUD FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

Table of Contents

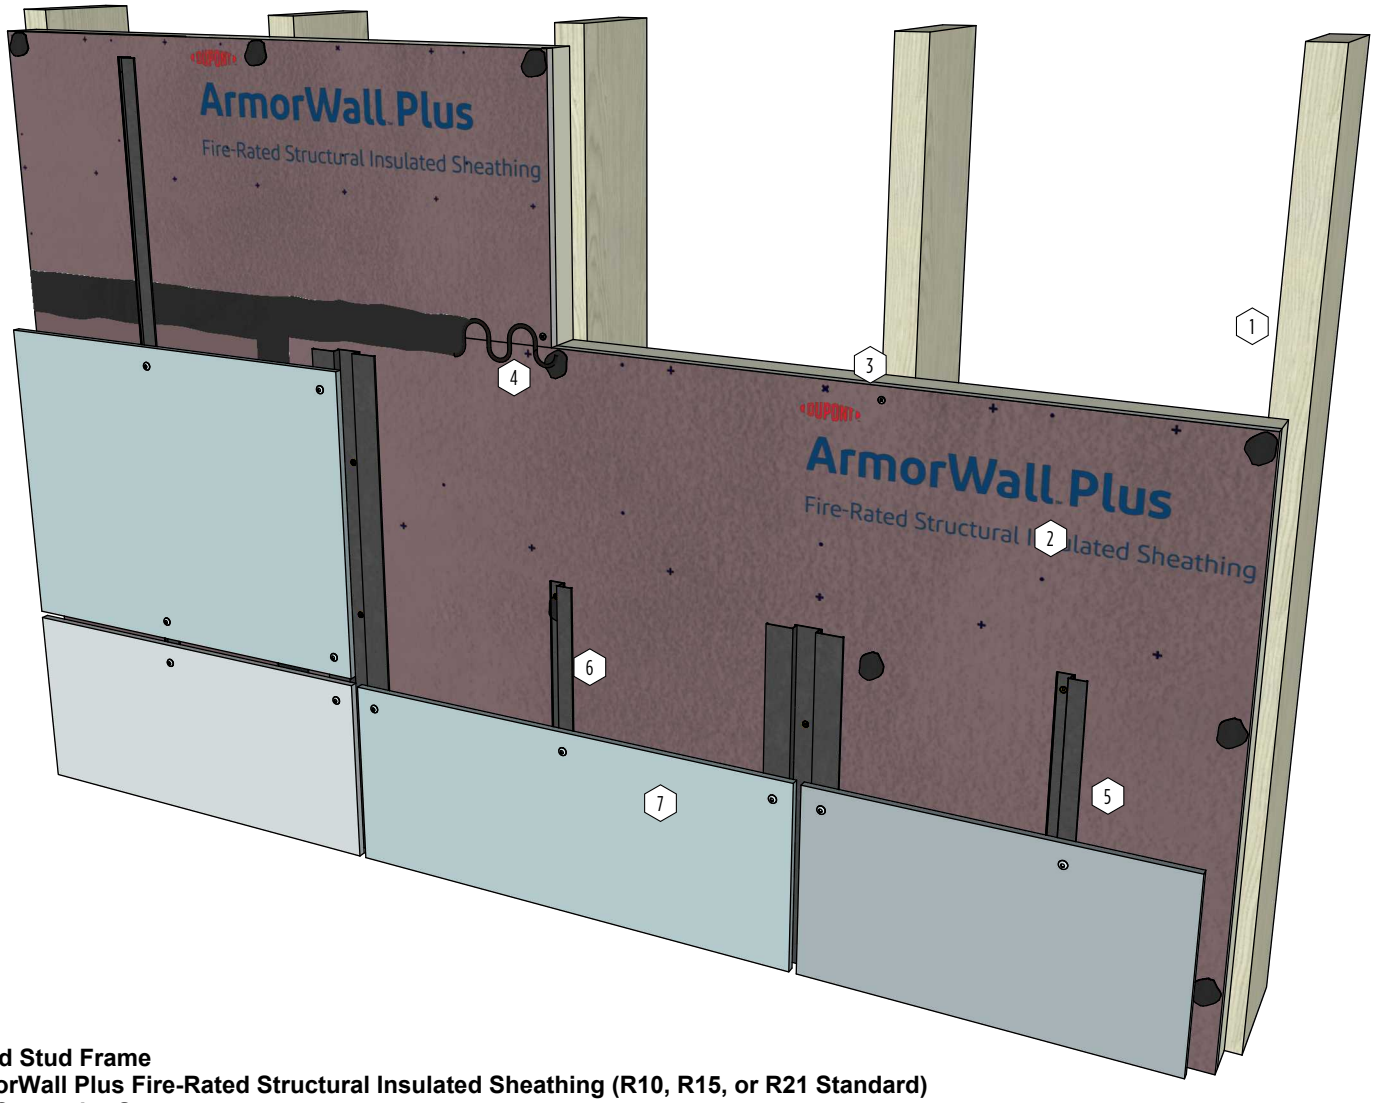

1: Wood Stud Frame
2: ArmorWall Plus Fire-Rated Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14 Consealor Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: Inverted Hat Cladding Mount Fastened with #10-9 Gimlet Point Self Tapping Screw
6: Inverted Zee Cladding Mount Fastened with #10-9 Gimlet Point Self Tapping Screw
7: Mechanically Fastened Exposed Fastener (EF) Cladding Panels

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
EF PANEL CLADDING ON ARMORWALL PLUS TO WOOD STUD FRAME FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with ™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

Table of Contents

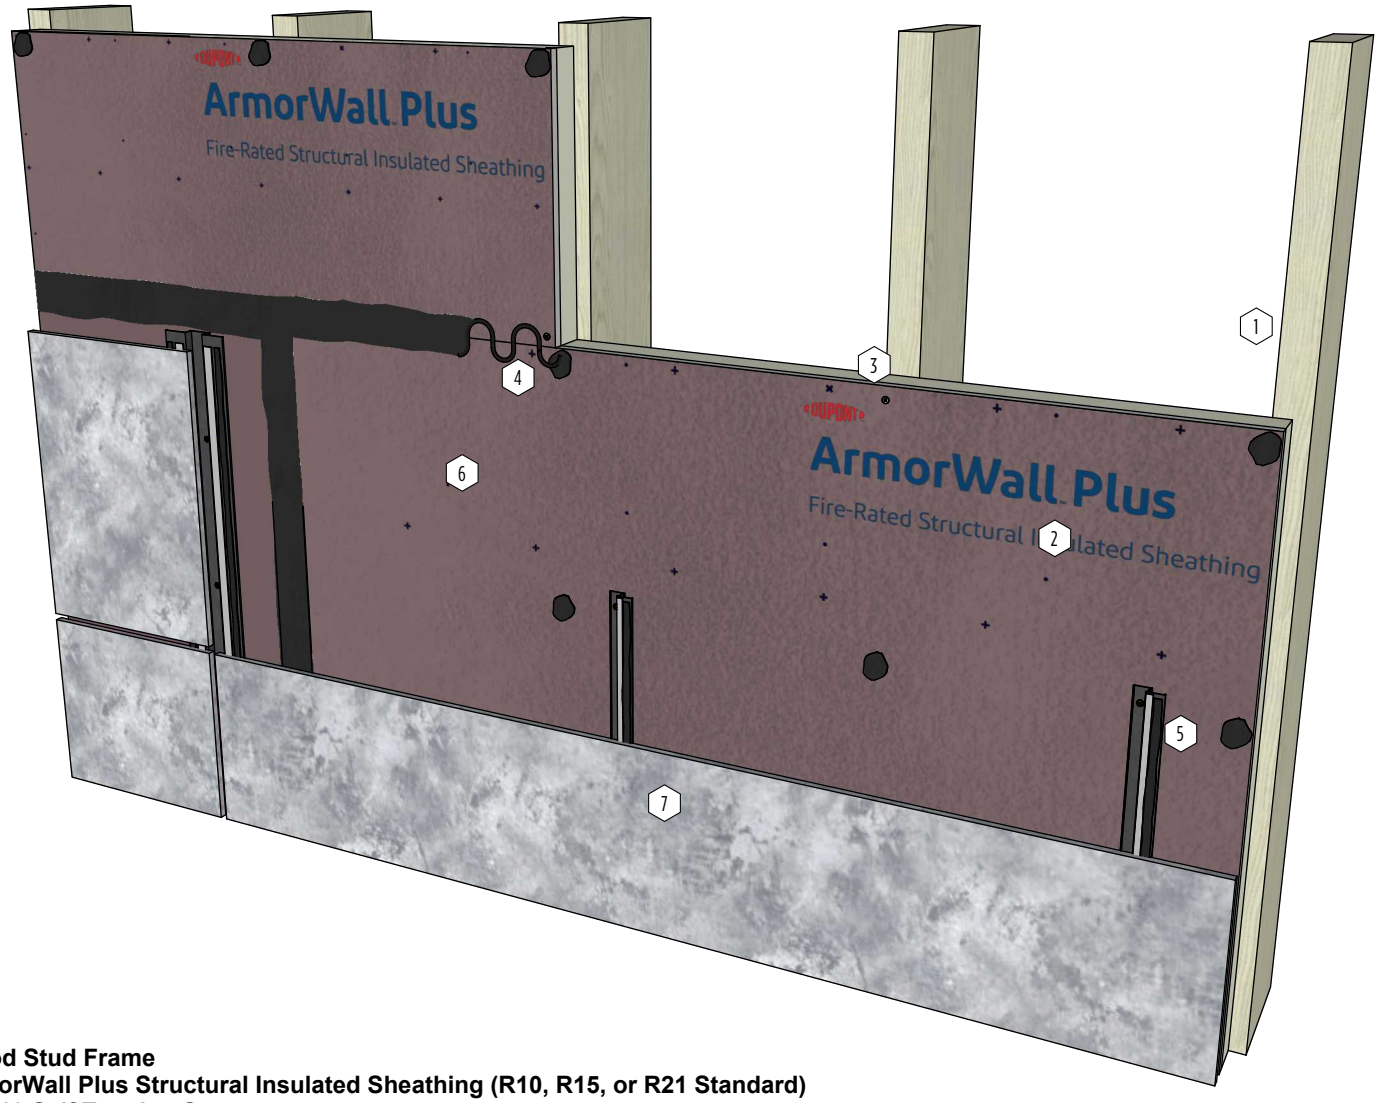

1: Wood Stud Frame
2: ArmorWall Plus Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14-13 Self Tapping Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: MOTO Extrusions Inverted Hat Cladding Mount Fastened with #10-9 Gimlet Point Self Tapping Screw
6: MOTO Extrusions Inverted Zee Cladding Mount Fastened with #10-9 Gimlet Point Self Tapping Screw
7: Tape and a Bead of Silicone Adhesive per Zee and on Both Sides of the Inverted Hat
8: Adhered Neolith Sintered Stone Panel

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
ADHERED CF PANEL CLADDING ON ARMORWALL PLUS TO MEDTAL STUD FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

Table of Contents

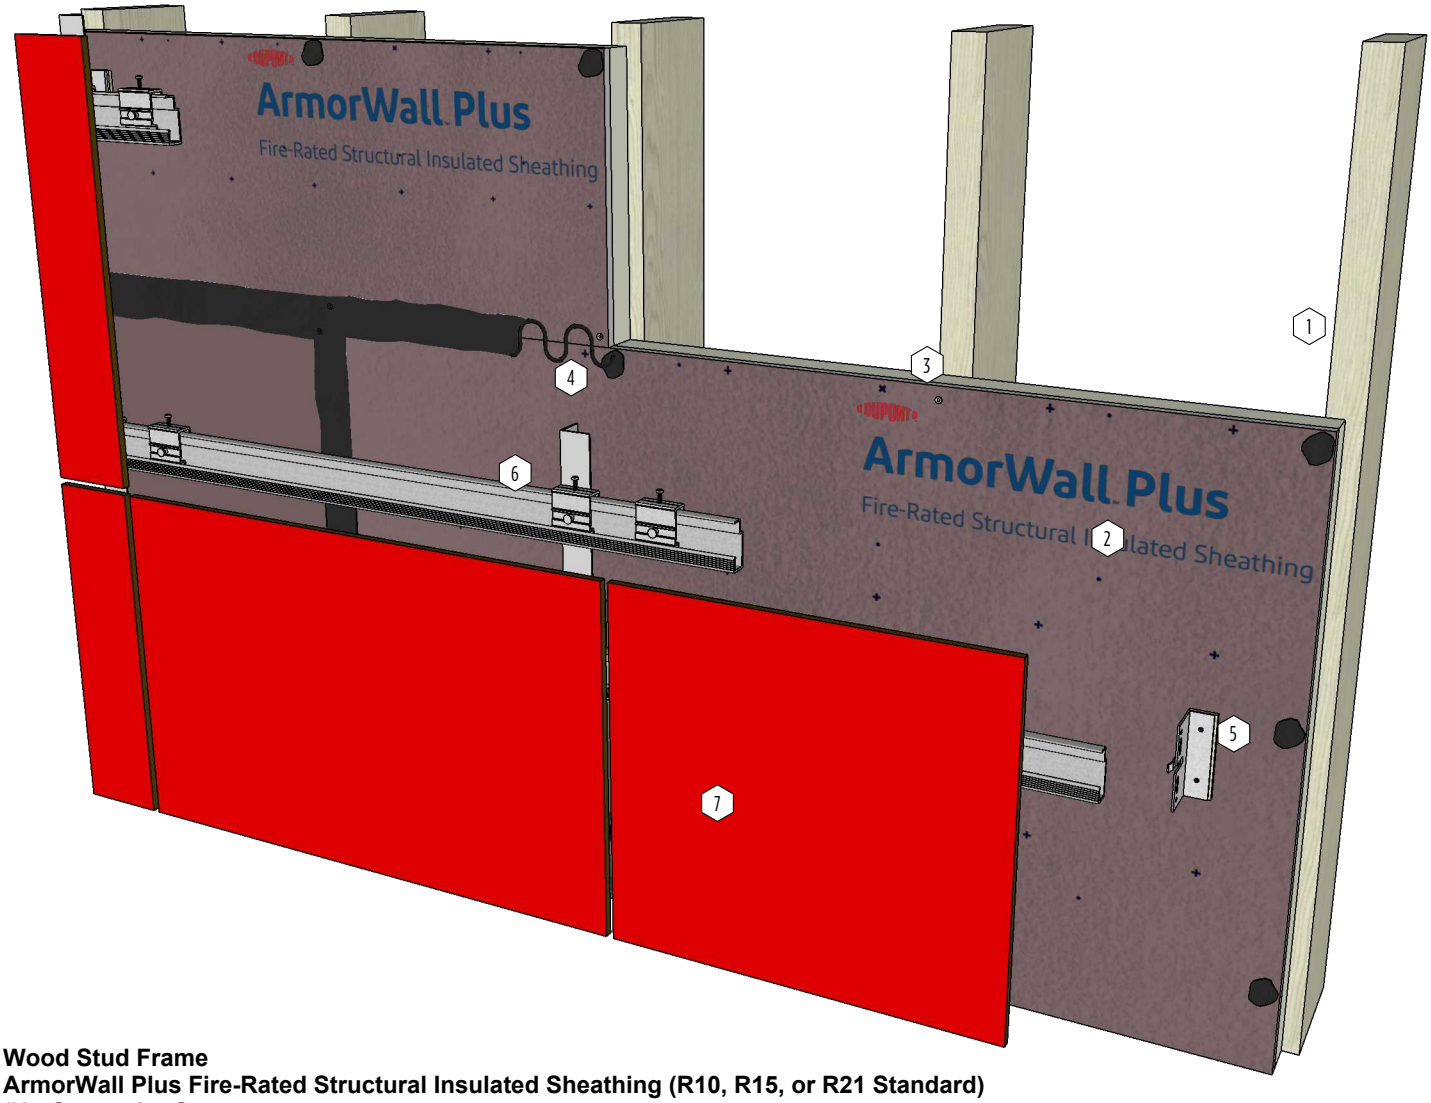

1: Wood Stud Frame
2: ArmorWall Plus Fire-Rated Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14 Consealor Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: Cladding System Clip Attached with #10-9 Gimlet Point Self Tapping Screw
6: Horizontal Rail w/ Sliding Panel Clip on Vertical T-Bar Cladding Mounting System
7: Cladding System Panels

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
PANEL CLADDING ON ARMORWALL PLUS TO WOOD STUD SUBSTRATE FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

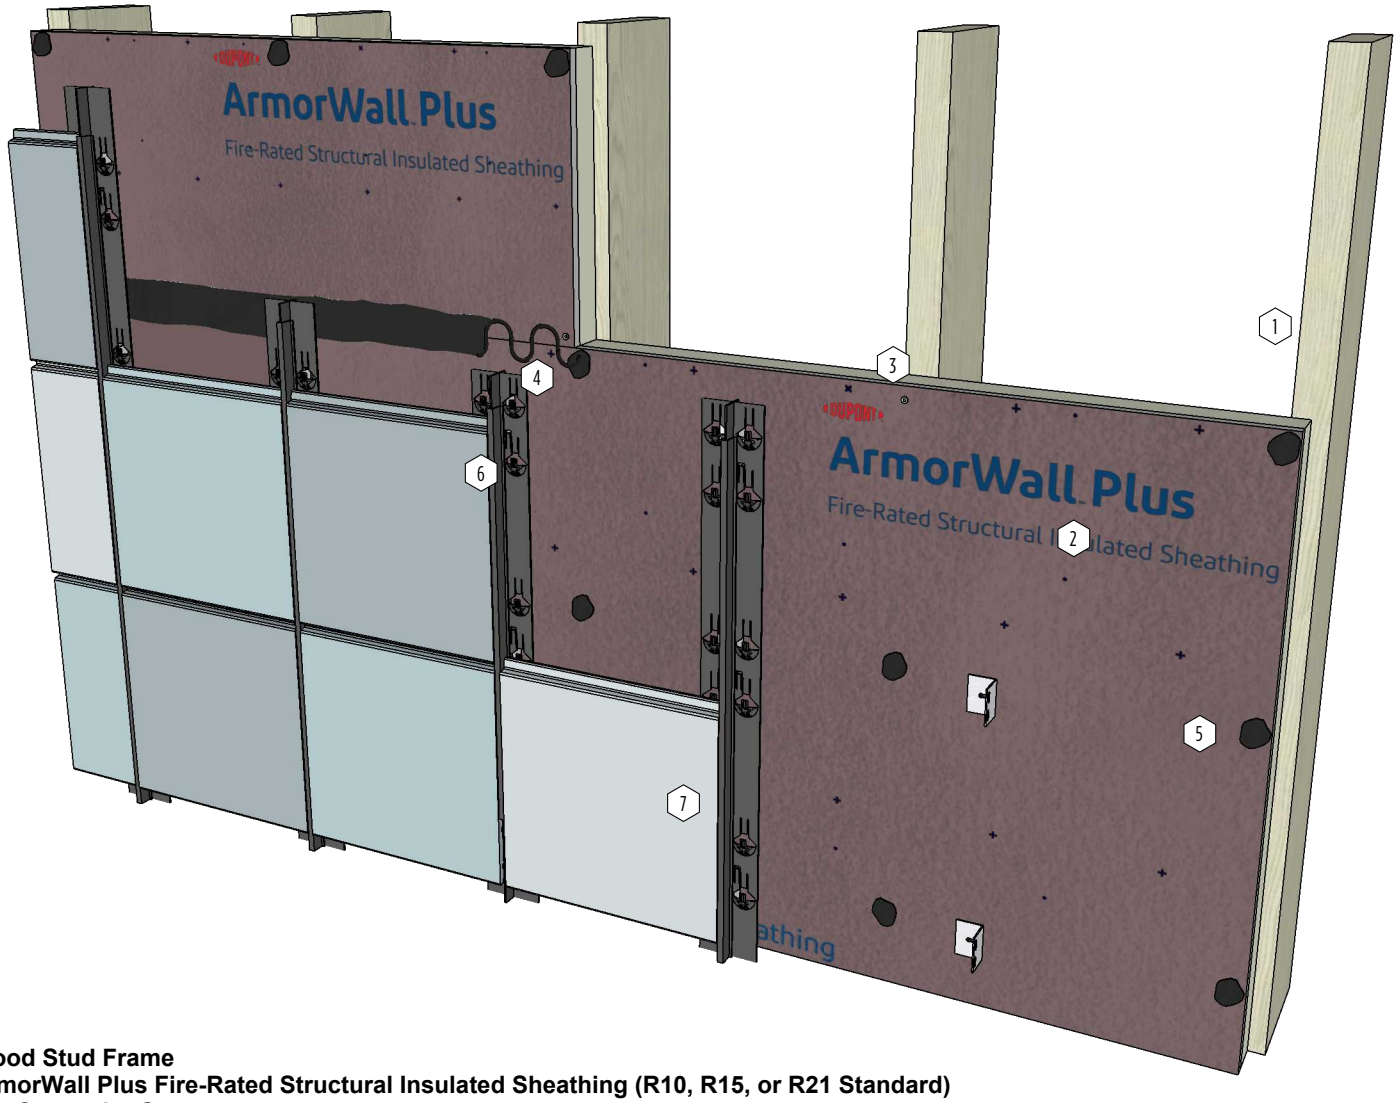

1: Wood Stud Frame
2: ArmorWall Plus Fire-Rated Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14 Consealor Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: Cladding System Clip Attached with #10-9 Gimlet Point Self Tapping Screw
6: Cladding Vertical Rail Mounting System
7: Ceramic Wall Panel

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
CERAMIC PANEL CLADDING ON ARMORWALL PLUS TO WOOD STUD SUBSTRATE FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

Table of Contents

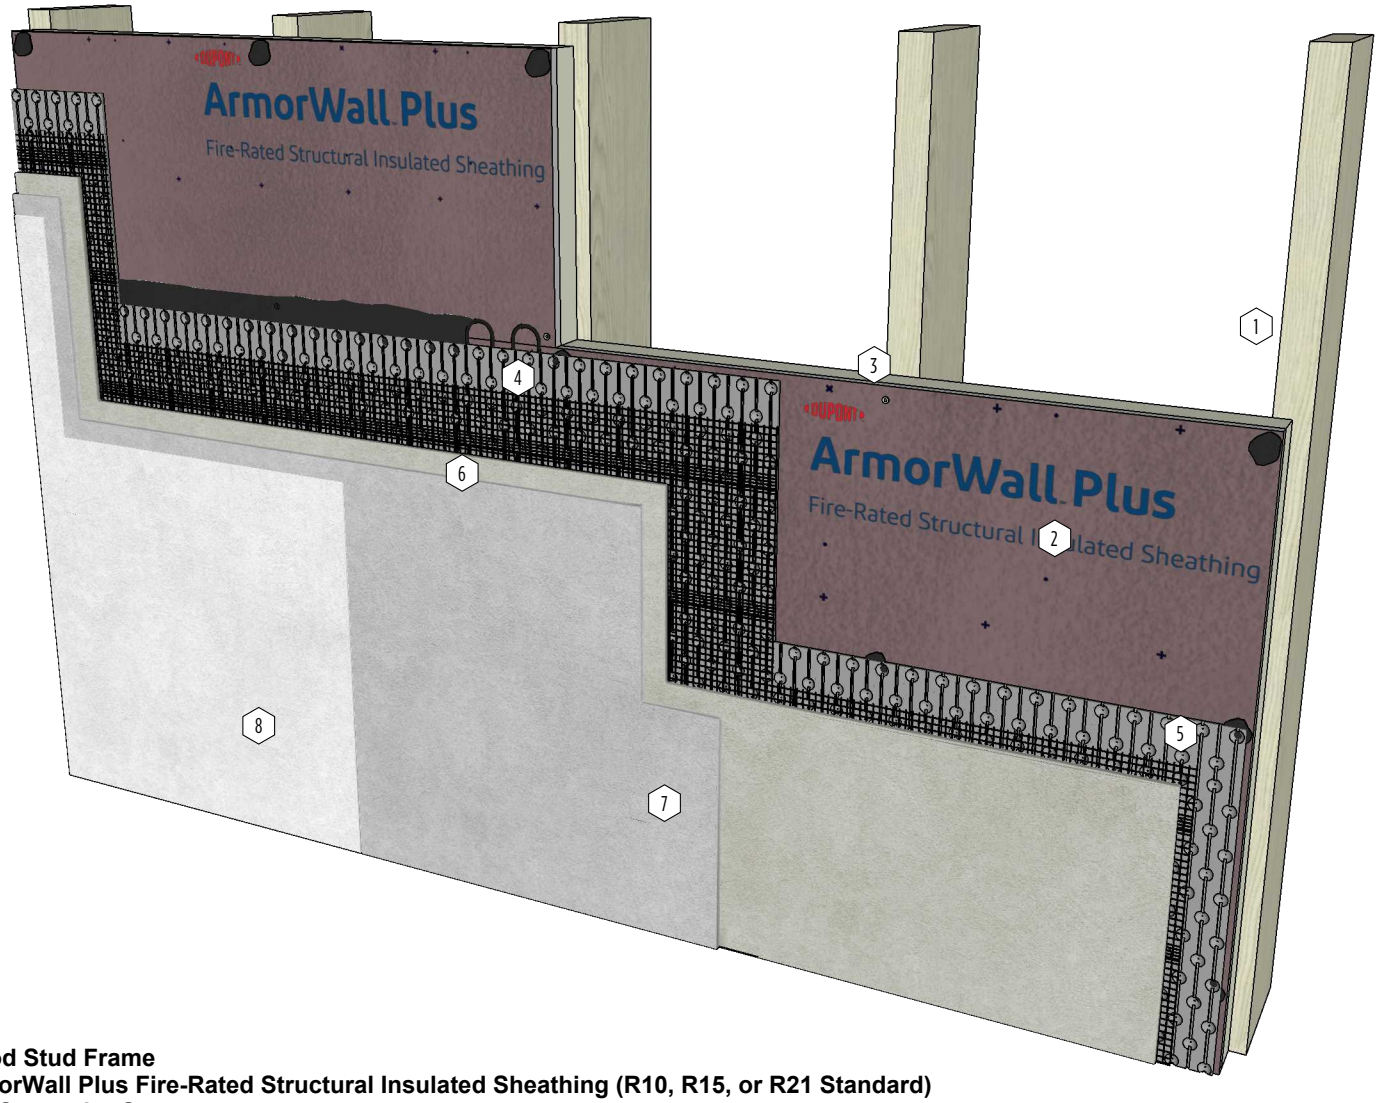

1: Wood Stud Frame
2: ArmorWall Plus Fire-Rated Structural Insulated Sheathing (R10, R15, or R21 Standard)
3: #14 Consealor Screw
4: ArmorSeal Sealant (Gunnable Grade) at all Seams and Fasteners
5: Delta Dry and Lath or Equivalent Non-permeable Drainage Mat Attached with #10-9 Gimlet Point Self Tapping Screw
6: Hard Stucco Scratch Coat
7: Hard Stucco Brown Coat
8: Hard Stucco Finish Coat

DuPont de Nemours, Inc
Wilmington, DE 19898

For general inquiries, please call
DuPont de Nemours: 1-833-338-7668

DETAIL TITLE:	DETAIL NO.:	SCALE:	REVISION:
HARD COAT STUCCO ON ARMORWALL PLUS TO WOOD STUD SUBSTRATE FIELD OF WALL		*SCALE*	01

NOTES:
- Pre-Drill concrete substrate prior to fastening ArmorWall per DuPont AmorWall Fastener Guide
- Self-tapping screw must penetrate a min. of three threads beyond the surface for metal studs and 1" min of thread penetration for cmu/masonry and wood studs.
- Refer to the Fastener Guide for Dupont™ ArmorWall™ Systems for Dupont™ approved cladding fasteners
- Cladding fasteners must penetrate 1" min. into ArmorWall Plus
- This information is provided by DuPont as reference only. Please consult and comply with local building codes, regulations, and laws
- For additional information regarding product installation, please refer to the current DuPont™ ArmorWall™ Installation Guide.

This information is based on information that DuPont believes to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Since conditions for use are outside the DuPont's control, DUPONT MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND ASSUMES NO LIABILITY IN CONNECTION WITH THE USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.
©2023 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with™, ℠ or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted.

For more information, visit us at
www.dupont.com/building.html
or call us at 1-833-338-7668

NOTICE: DuPont believes this information to be reliable. It is subject to change as additional knowledge and experience are gained. It is not intended as a substitute for any testing you may conduct to determine for yourself the suitability of our products for your particular purpose. Customer is also responsible for ensuring its use of product, including workplace and disposal practices are in compliance with applicable laws and regulations. Since conditions for use are outside the control of DuPont, DuPont de Nemours, Inc. OR its affiliates MAKE NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND ASSUMES NO LIABILITY IN CONNECTION WITH ANY USE OF THIS INFORMATION. This information is not intended as a license to operate under or a recommendation to infringe any trademark, patent or technical information of DuPont or other persons covering any material or its use.

© 2024 DuPont. All rights reserved. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with ™, SM or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted. All rights reserved.

Form No. 43-D101326-enNA-0824 CDP